

bellessi



Colour for Life

Stainless Steel Splashback Filler Panel

For use on the front of your Bellessi polymer panel the width behind your gas cook top. Ensure the surface you are going to adhere your SS panel to is dry and clear of contaminants.

Your SS panel comes with a protective film on the front of your panel. Leave this on until you have completed your installation. Please fully inspect your SS panel for any imperfections prior to installation.

Using neutral cure clear 100% silicone apply to the rear of your SS panel in thin vertical beads approximately 100mm apart the width of your panel. Ensure the beads around the edges are within 20mm of the perimeter of your panel.

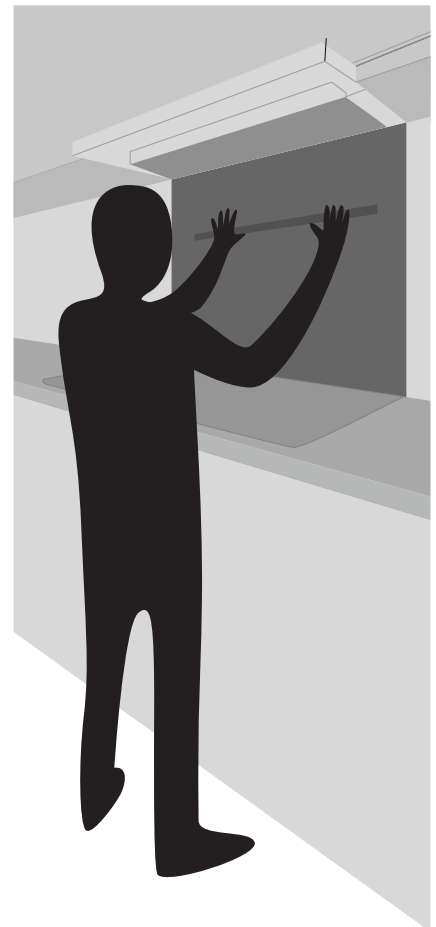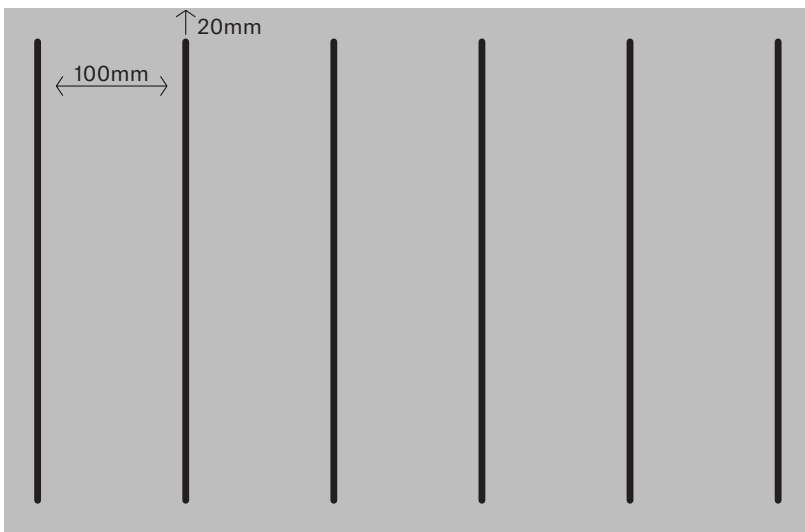

Once your SS panel has been installed wipe away any excess silicone before it is dry.

Leave the protective film on the front of your SS panel for 24 hours allowing your silicone time to fully cure. Be careful not to pull your SS panel away from the wall while removing the film.

When pressing your SS panel against your Polymer splashback use a spirit level or straight edge to ensure a nice even flat contact.